


Aldon Sabertooth™ Portable Derails

For temporary derailing capability use these Portable Derails on exposed rail track and wooden ties. All Sabertooth™ portable derails feature tool-free installation, are lightweight, and feature a patented safety hook to keep derail from sliding down the rail. Derail blue flag and holder (manually-operated) are included.



4014-09-S Two-Way

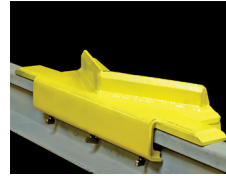

4014-06-S Left Throw



4014-07-S Right Throw

The one-way portable derails are used for freight cars and all size locomotives (rails 90–141 lbs, wooden ties, tie spacing: 18–24"). The two-way portable derails are for freight cars and 4-axle locomotives only. Do not use two-way with 6-axle locomotives (rails 100–136 lbs wooden ties, tie spacing 19–24").

- Portable Derail, One-Way Left Throw, Ship wt: 35 lbsNo. 4014-06-S
- Portable Derail, One-Way Right Throw, Ship wt: 35 lbsNo. 4014-07-S
- Portable Derail, Two-Way, Ship wt: 50 lbs.....No. 4014-09-S

Derail Accessories

This hinged derail lifting lever takes all the work out of lifting and swinging derail. Handle reduces physical effort to just 20 lbs.

- Derail Lifting Lever (for Hinged Derails Only), 1" Thick Block (Old Derail Models)No. 4014-25
- Derail Lifting Lever (for Hinged Derails Only), 3/4" Thick Block (New Derail Models)No. 4014-28
- Derail Padlock (for Portable or Hinged Derails).....No. 4124-97



Left to right: 4124-97, 4014-25



ALDON SAFETY SIGN HOLDERS AND SIGN PLATES

These OSHA-Mandated Safety Signs and Holders will assure you have the appropriate signage in your rail yard and spur tracks and can assist in prevention of "fouling the track". OSHA and FRA require blue signs on any track where locomotives of the railroad serving your plant will operate. Red signs may be called for in special situations. Red signs satisfy OSHA Blue Flag Rule. (Sign plates are not included with sign holders and must be purchased separately).

Sign Holders



Portable Sign Holder
This clamp-on, non-locking style steel holder clamps to rail head and allows for easy on, easy off versatility. Ship wt: 7 lbs.
Sign Holder, Portable Clamping, Exposed Rail...No. 4015-01



Spiked-Down Hinged Sign Holder
The hinged sign holder can fold down in either direction while the base plate is spiked to the tie. Ship wt: 16 lbs.
Sign Holder, Hinged Spiked-Down, Exposed Rail...No. 4015-06



Permanent Hinged Sign Holder
Like the Spiked-Down model above, this holder folds down flat in either direction but, is bolted to base of rail. Ship wt: 15 lbs.
Sign Holder, Permanent Hinged, Exposed Rail...No. 4015-05



Magnet Base Sign Holder
Just plunk it down on the rail. Withstands winds up to 60 MPH. For flush or exposed rail. Aluminum construction. Ship wt: 7 lbs.
Sign Holder, Magnetic Base.....No. 4015-54

Sign Plates

These aluminum 12" (L) x 15" (W) x .080" sign plates are available in Blue (-B) and Red (-R) and can be ordered in English (no marking), Spanish (/S) and French (/F). Example: 6STOP-B/S this sign is for "STOP" in blue color and in Spanish.



- Safety Sign, 12" (L) x 15" (W), "STOP"No. 6STOP
- Safety Sign, 12" (L) x 15" (W), "STOP – CAR CONNECTED".....No. 6SCC
- Safety Sign, 12" (L) x 15" (W), "STOP – CREW AT WORK"No. 6SCAW
- Safety Sign, 12" (L) x 15" (W), "STOP – MEN AT WORK".....No. 6SMAW
- Safety Sign, 12" (L) x 15" (W), "DERAIL".....No. 6DERAIL

Add: -B for Blue, -R for Red, /S for Spanish, /F for French.
6STOP-B/S = Sign for STOP in blue and Spanish)