

MICRO/F

Clipper Micro Debearder


The Clipper Micro Debearder was originally designed to debeard barley for microbrew houses and malt companies, but has become one of the most versatile machines in the product conditioning line. With improvements such as increased drum material thickness, hardened hammers and a new style machined stress proof drive shaft. The Clipper Micro Debearder is a multi-purpose machine available with various motor sizes and voltages along with optional variable speed controls to handle a wide range of jobs with ease. The Barley version is designed to operate at a slower 642 RPM for a gentler processing of malt barley. Features include a heavy duty ten-gauge steel housing, interchangeable heat treated hammers, 4.75" square inlet, built in discharge aspiration connection for pneumatic clean out along with one top inspection door and variable speed drive. The perfect equipment to compliment the Eclipse line of seed cleaners.

Applications

- Debeard Barley to improve test weight
- Hull "whitecaps" in Wheat
- Break up Spelt clumps
- Clip Oats to remove excess fibers, increase test weight
- De-awn Bronco grass (in Oats), Dill seed, Celery seed
- Polish Tomato seed, remove mold from Pepper balls, Coffee beans, and Cassia (Cinnamon) bark
- Break up Alfalfa pods, grass clusters, Flax balls, crested Wheat, Fescues or Brome grass

Net wt: 350 lbs, Ship wt: 450 lbs, Actual dims: 42.5" (L) x 40.5" (W) x 38.5" (H), Ship dims: 48" (L) x 42" (W) x 36" (H). (For screen perforations, see page 86).

Micro Debearder, with Drive Pkg., 3HP, 60Hz, TEFC, 3 Ph, 968 RPM.....	No. MICRO/F
Micro Debearder, with Drive Pkg., 3HP, 50Hz, TEFC, 3 Ph, 968 RPM.....	No. MICRO/G
Micro Debearder, with Drive Pkg., 3HP, 60Hz, TEFC, 1 Ph, 968 RPM.....	No. MICRO/B
Micro Debearder, with Drive Pkg., 3HP, 50Hz, TEFC, 1 Ph, 968 RPM.....	No. MICRO/C
Micro Debearder, with Drive Pkg., 3HP, 60Hz, TEFC, 3 Ph, 968 RPM, Variable Drive with VFD.....	No. MICROV/B
Micro Debearder, Barley Version, with Drive Pkg., 3HP, 60Hz, TEFC, 1 Ph, 642 RPM.....	No. MICROB/B
Micro Debearder, Barley Version, with Drive Pkg., 3HP, 60Hz, TEFC, 3 Ph, 642 RPM.....	No. MICROB/F
Optional Surge Hopper with Site Glasses.....	No. MICRO-SH
Required Crating for Domestic or Export.....	No. MICRO/DOM

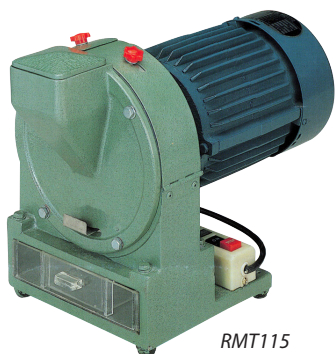

RMT115

Rice Micro Tester

The RIMAC Rice Micro Tester is a compact and handy machine that can be used to test samples of rice prior to a full production run to determine approximate total white rice yield in the whitening process. Used around the world in laboratories, research stations and educational institutions. Main features are the small sample size to complete test, total recovery of grain in short test cycle, only 1-2 cups of brown rice required to complete the test. This quick whitening of the rice samples brings the sample to the desired degree of whiteness for a quick inspection. Integrated 1/3HP 115 volt, 60Hz electric motor.

Net wt: 53 lbs, Actual dims: 15" (L) x 10" (W) x 12" (H), Ship wt: 69 lbs, Ship dims: 18" (L) x 14" (W) x 18" (H).

Rice Micro Tester, 1/3HP, 115/230V, 50/60Hz, 1Ph.....	No. RMT115
Replacement Screen.....	No. RMT001
Replacement Emery Roller.....	No. RMT002
Required Wooden Box for Domestic or Export.....	No. RMT/DOM