


### Oscillating Shape Sorter


The oscillating vibratory seed shape sorter is a great piece of precision equipment to help you quickly and easily sort rounds from non-round seed. The principle of operation is gravity and vibration in the same application. The oscillating shape sorter drops raw seed from a vibratory feeder on to the inclined vibratory table. The table vibration allows flat and semi-flat seed to walk up the table while the rounds roll straight off the table. There are 8 individual trays that can collect product that vibrates or rolls off the table. This equipment works well for very small seeds such as flower seeds. The capacity for this equipment ranges from 1–50 lbs per hour. Net wt: 165 lbs, Actual dims: 24" (L) x 30" (W) x 48" (H), Ship wt: 310 lbs, Ship dims: 38" (L) x 38" (W) x 58" (H).

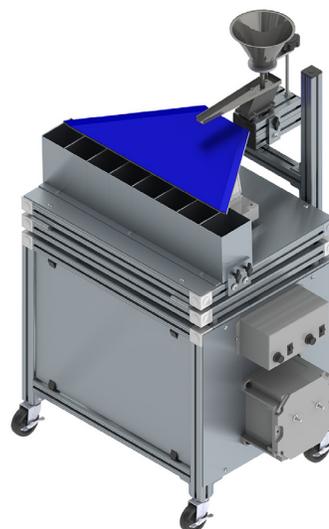

- Oscillating Sorter, 110V, 60Hz..... **No. OSC**
- Oscillating Sorter, 220V, 50Hz..... **No. OSC/C**

### Belt Seed Grader

The belt seed grader performs an exceptional job of separating round material from non-round material. This can be used to separate weed seeds or mis-shaped seed or debris out of your seed lots. With an open flat belt design there is no area for cross-contamination to trap material when processing seed. Separating splits or broken kernels out of seed samples is very common with this equipment. The capacity for this belt grader is 1–5 bph depending on the commodity. Net wt: 300 lbs, Actual dims: 24" (L) x 42" (W) x 48" (H), Ship wt: 500 lbs, Ship dims: 51" (L) x 37" (W) x 58" (H).

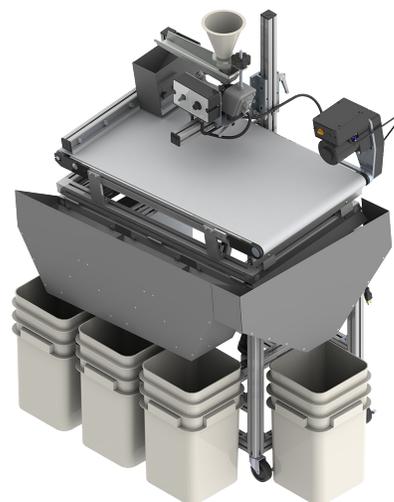

- Belt Seed Grader, 110V, 60Hz..... **No. BSG**
- Belt Seed Grader, 220V, 50Hz..... **No. BSG/C**

### Portable Spiral Seed Cleaner

This Mobile Spiral Separator is a flexible portable alternative to stationary cleaners. It is a specialty cleaner that is the perfect solution for on-site cleaning of many commodities like Canola, Mustard, and Soybeans mixed with Corn. These portable cleaners can be used on other 'round from flat' separations, where there is a high percentage of round product with a small portion of flat or irregular seed. Four core spiral separators are mounted on tandem axle trailers to ensure most capacities or location demands can be met! These cleaners are versatile and can be configured with a gooseneck or bumper hitch trailer. Included are a seed hopper, inlet and outlet conveyors. Perfect for any firm that travels to perform 'on-site' cleaning! Image shows two 4-core spiral separators, but these cleaners can be configured to your specific needs. Please call us for a customized quotation.



- Portable Seed Cleaner, 110V, 60Hz..... **No. PSC**
- Portable Seed Cleaner, 220V, 50Hz..... **No. PSC/C**