

# There's a World of Difference

The new **Seedburo 8800SS Digital Computer Grain Scale** features the latest in grading scales. Based on proven technology, the 8800SS provides you with dockage percentage, test weight results in pounds per bushel or kilograms per hectoliter and gram weight – all with the push of a button.



 **Seedburo**<sup>®</sup>

*Serving Agribusiness Worldwide with Quality Products, Services, and Technological Innovations.*

## There really is a world of difference.

The Seedburo 8800SS Digital Computer Grain Scale is not only the most accurate on the market, it is also the industry leader. With the 8800SS you can get dockage (foreign material) percentage, test weight results in pounds per bushel or kilograms per hectoliter and gram weight all with the push of a button. It's that easy! The 8800SS also features a built-in memory that allows samples to be stored and recalled. That makes calculating percentages a breeze.


Other features of the 8800SS let you set up procedures of standard or reciprocal percentage modes, cup selection (quart, pint or liter), active/frozen percent and test weight selection.

Of course its NTEP certified and the optional RS232C interface lets you hook it up to your computer or printer. And, you you can get it in 115V, 50/60Hz or 230V, 50/60Hz models. No. 64P Triangular Sample Pan is included.

Imagine, all these features in one easy to use unit. The new Seedburo 8800ss Digital Computer Grain Scale. There really is a world of difference.



- It is the industry leader in grading scales.
- Touchpanel Calibration
- Membrane Touch Panel
- Tests weight in Lbs/Bu or Kg/Hl to 0.01
- Dockage readability to 0.01%
- Multiple Cup Selection
- 2000 Gram Capacity
- Two Year Warranty
- NTEP Certified for Legal Trade Applications

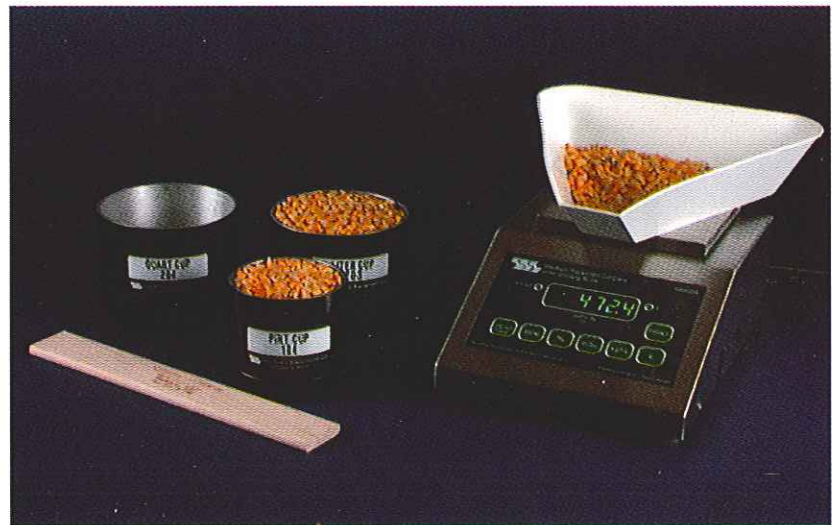

### PRODUCT SPECIFICATIONS - 8800SS DIGITAL COMPUTER GRAIN SCALE

CAPACITY	TEST WEIGHT & FM	SCALE DIMENSIONS	SHIP DIMENSIONS	NET WEIGHT
0-2000 x 0.2g	0.01 (Lbs./Bu, Kg/Hl and %)	11.5"L x 8.5"W x 5"H	17"L x 13"W x 13"H	10 Lbs.

SHIP WEIGHT	CALIBRATION WEIGHT SET	FILLING HOPPER AND STAND	COMMODITY HOLDER	OFFICIAL STRIKE-OFF STICK
12 Lbs.	WT88 (2 ea 1000g wts)	No. 151	No. 204 Quart Cup, No. 104 Pint Cup, No. 203 Liter Cup	No. 65

 **Seedburo**  
Equipment Company

2293 S MT PROSPECT RD  
DES PLAINES, IL 60018  
TOLL FREE: 800-284-5779  
PHONE: 312-738-3700  
FAX: 312-738-5329