




RL1100

Portable Platform Scale

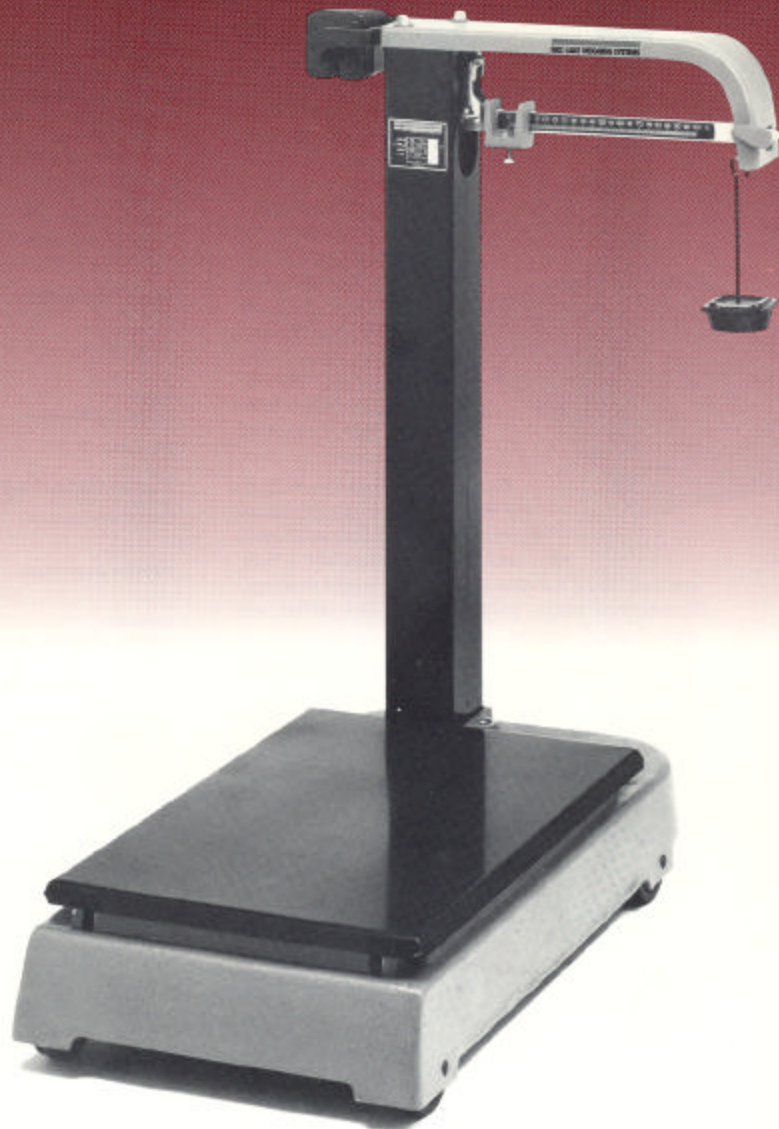

RICE LAKE WEIGHING SYSTEMS

RL1100

Portable Platform Scale



The RL1100 heavy-duty portable beam scale is renowned for delivering years of trouble-free industrial weighing performance. Exclusively manufactured to strict Rice Lake Weighing Systems quality specifications, the RL1100's rugged cast iron platform, base and levers exceed stability, durability and value expectations. Hardened tool steel precision pivots and self-aligning bearings ensure accurate and consistent weighments.

Equipped with fully-enclosed wheels, the RL1100 is ideal for applications requiring portability. A large weigh beam offers dual-sided graduations with a high-contrast black background for easy weight readings. Counterpoise weights provided are cast iron, slotted, and marked to scale capacity.

The RL1100 Avoirdupois Single Beam scale is NTEP certified legal-for-trade for Class III, 2000 divisions.

Standard Features:

- Cast iron construction
- 1000 lb or 500 kg capacity models available
- Single or double beam configurations
- Easy-to-read die-cast beam
- Locking screw knob on poise
- Slotted cast iron counterpoise weights, marked to scale capacity
- Easy-to-use weigh beam lock
- Heavy-duty wheels
- NTEP certified (1000 lb single beam)

Specifications:

Construction:	Cast iron platform, base, and levers
Weigh Beam:	Die-cast aluminum dual-sided beam, graduations in .5 lb or .2 kg increments
Poise:	Steel locking screw provided
Pivots and Bearings:	Precision-machined, hardened tool steel
Warranty:	One year limited warranty

Dimensions/Capacity:

Overall Dimensions:	36.13" L x 25.25" W x 43.0" H (917.7mm L x 641.4mm W x 1092.2mm H)
Platform Dimensions:	18" L x 27" W x 8.50" H (457.2mm L x 685.8mm W x 215.9mm H)
Capacity:	1000 x .5 lb or 500 x .2 kg
Approx. Shipping Weight:	200 lb



CC 493-004
Rev. 11-2000
Class III

Your Rice Lake Weighing Systems Distributor is:



Seedburo Equipment Company

1022 WEST JACKSON BLVD., CHICAGO, IL 60607-2990
PHONE (312) 738-3700 TOLL-FREE (800) 284-5779
DOM. FAX (312) 738-3544 INTL. FAX (312) 738-5329
TELEX: 270378 OR 196153